

## 2. Operating Instructions (Supplier)

### 2.1. Product Description

**Previous/VOL-:** press it to switch to previous track, press and hold it to turn down the volume

**Next/VOL+:** press it to switch to next track, press and hold it to turn up the volume

**LED mode indicator**

**Mic**

 
**Play/Pause:** press it in playing state to play/pause

**BT:** press and hold it to disconnect the Bluetooth, and press it to connect the last connected Bluetooth device.

**Mode:** press it to switch among BT, TF and AUX

**Power:** same as the Mode button; press and hold for 2 seconds to turn on/off.

**Call:** if there is incoming call in BT state, press this button to answer the call, or press and hold it to reject; during the call, press it to end.

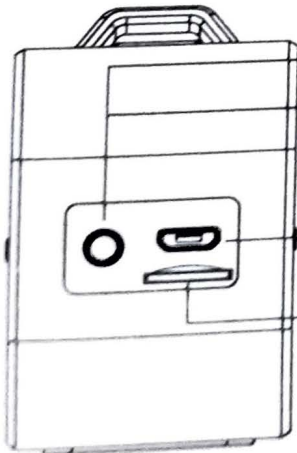


**AUX port:** 3.5MM Audio cable jack

**Reset hole:** Reset the device with thin stick when the speaker halted

**USB port:** data transfer/charging

**TF card slot:** insert a TF card and play the audio file, or connect to PC and read the data on the card

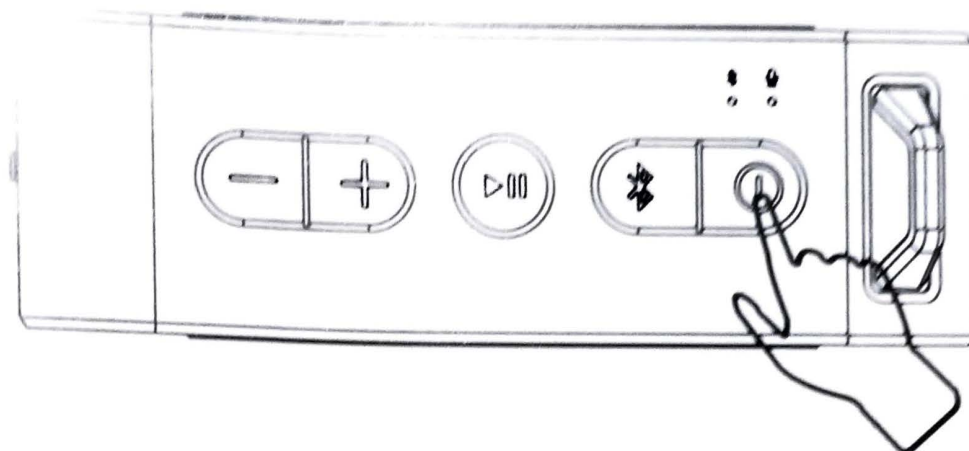


## 1. Press and hold the Power button for 2 seconds to turn the speaker on/off

Press and hold the Power button for 2 seconds to turn the speaker on. The speaker produces a startup sound, and the blue LED starts flashing. Press and hold the Power button again for 2 seconds to turn the speaker off.

## 2. Bluetooth connection

Turn on the Bluetooth on your mobile phone, tablet PC or other device, search for Bluetooth device "SHOUT", and then tap Connect to confirm.

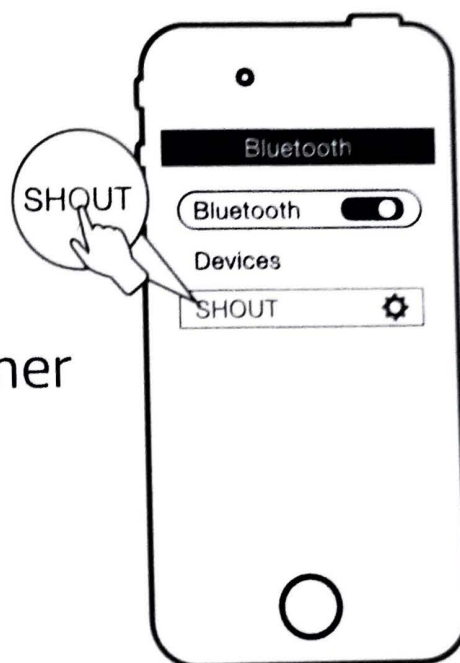


### **3. Successfully pairing a Bluetooth device and playing music files**



After successful pairing, the device produces a series of tones, the blue LED remains on, and you can select and play music files on a mobile phone or a tablet PC.

1. If a code is needed, type "0000" and tap OK to connect
2. The Bluetooth speaker will connect to the last paired device automatically (when turned on).

### **4. Disconnecting the Bluetooth device**

When the speaker and the device are connected, press and hold  to disconnect the Bluetooth device, which is accompanied by a single tone; the speaker is available to connect and the blue LED starts flashing.


### **5. Re-establishing the Bluetooth connection**

When the Bluetooth connection is interrupted, you can tap  to connect to the last paired device, and tap  to play the last played song.

## Playing music on a TF card


### 1. Insert a TF card and turn on the device

Insert a TF card with music files on it into the card slot, press and hold the Power button to turn on the speaker, which will produce a series of tones.

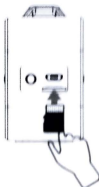

### 2. Switch to a TF source

Press the Source switch button (Ⓢ), and the speaker will produce a series of tones and play the music files on the TF card.

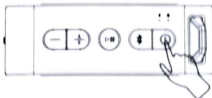




**TIP:** BT is the Bluetooth speaker's default source; if you want to play music from a TF card, you must first switch to the TF source; if the speaker is turned on, the files on the TF card will be played automatically when the card is inserted.



## Hands-free call

### 1. Connecting the speaker and a mobile phone


When the speaker is connected to your smartphone, and there is an incoming call, the music will pause and a single tone is produced. Press  to answer the call and press it again to end the call or press and hold  to reject the call.

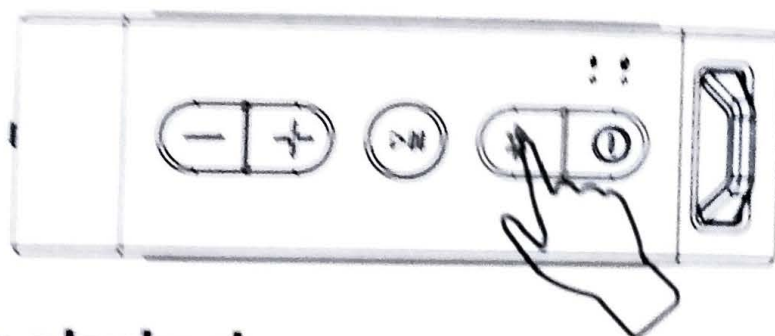


## External audio playback

### 1. Connecting audio cable

Connect one end of the audio cable to the speaker, and the other to the audiosource.


Press and hold the Power button to turn on the speaker, insert the audio cable after a series of tones are produced, and press the Source switch button  to switch to an Aux In source; For plug and play, insert the audio cable when the speaker is already powered on.

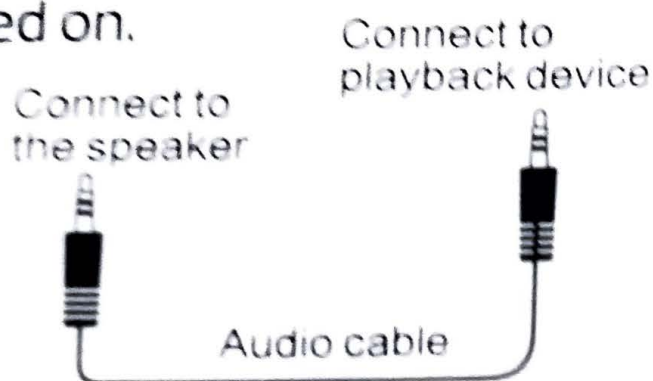

## Entering Carder read mode:

### 1. Copy music

Turn off the speaker, insert the TF card, connect the speaker to a PC with a USB cable via the Micro USB port and press the Power button to enter card reader mode. You can now copy music files to the TF card.

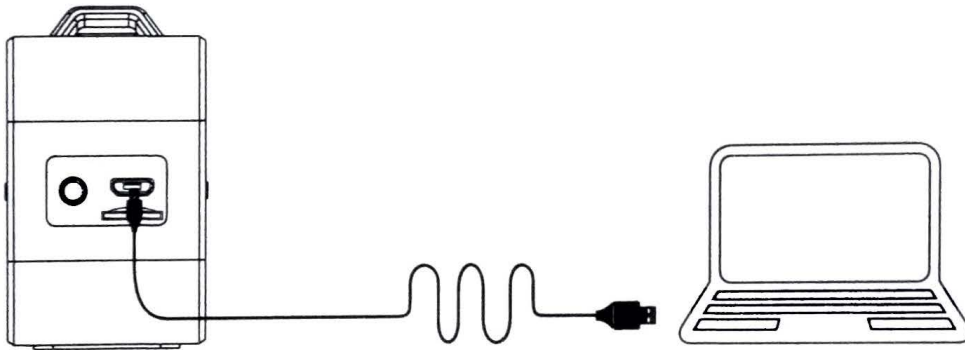

### 1. Charging the speaker

You can connect the speaker to a PC with the provided USB cable and charge the speaker, regardless of whether it's powered on or off. It is recommended you purchase a separate DC 5V=1A USB charger or any other 5V 1A mobile phone charger so that you can charge the speaker through a socket outlet.

**TIP:** Please charge the speaker before use if it hasn't been used for a long time.